

FIG 1 A.E.R.
PER EXCHANGE.

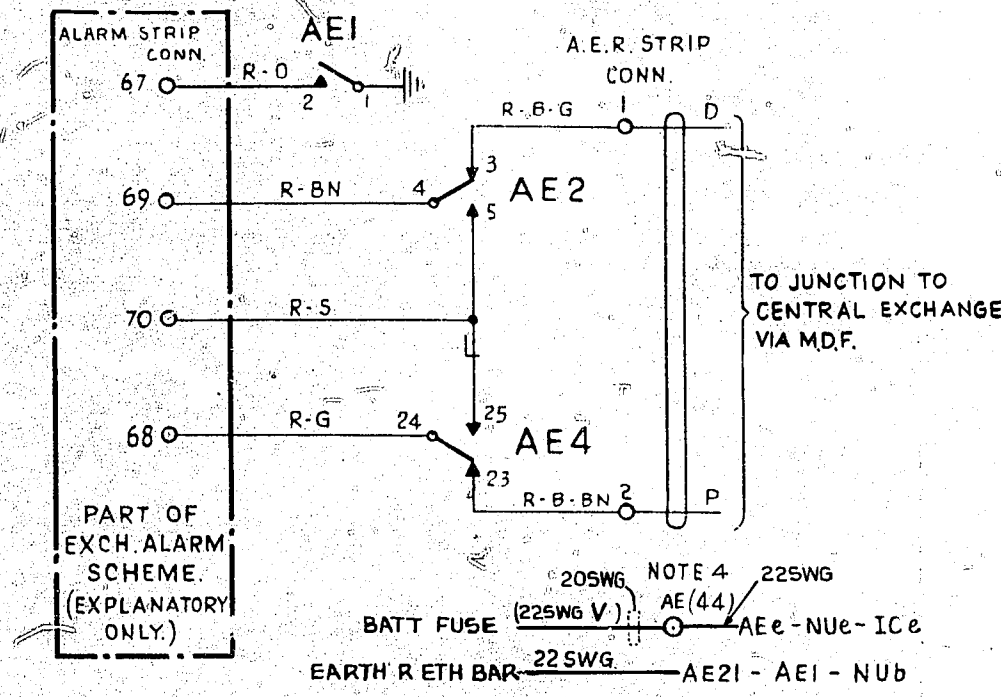
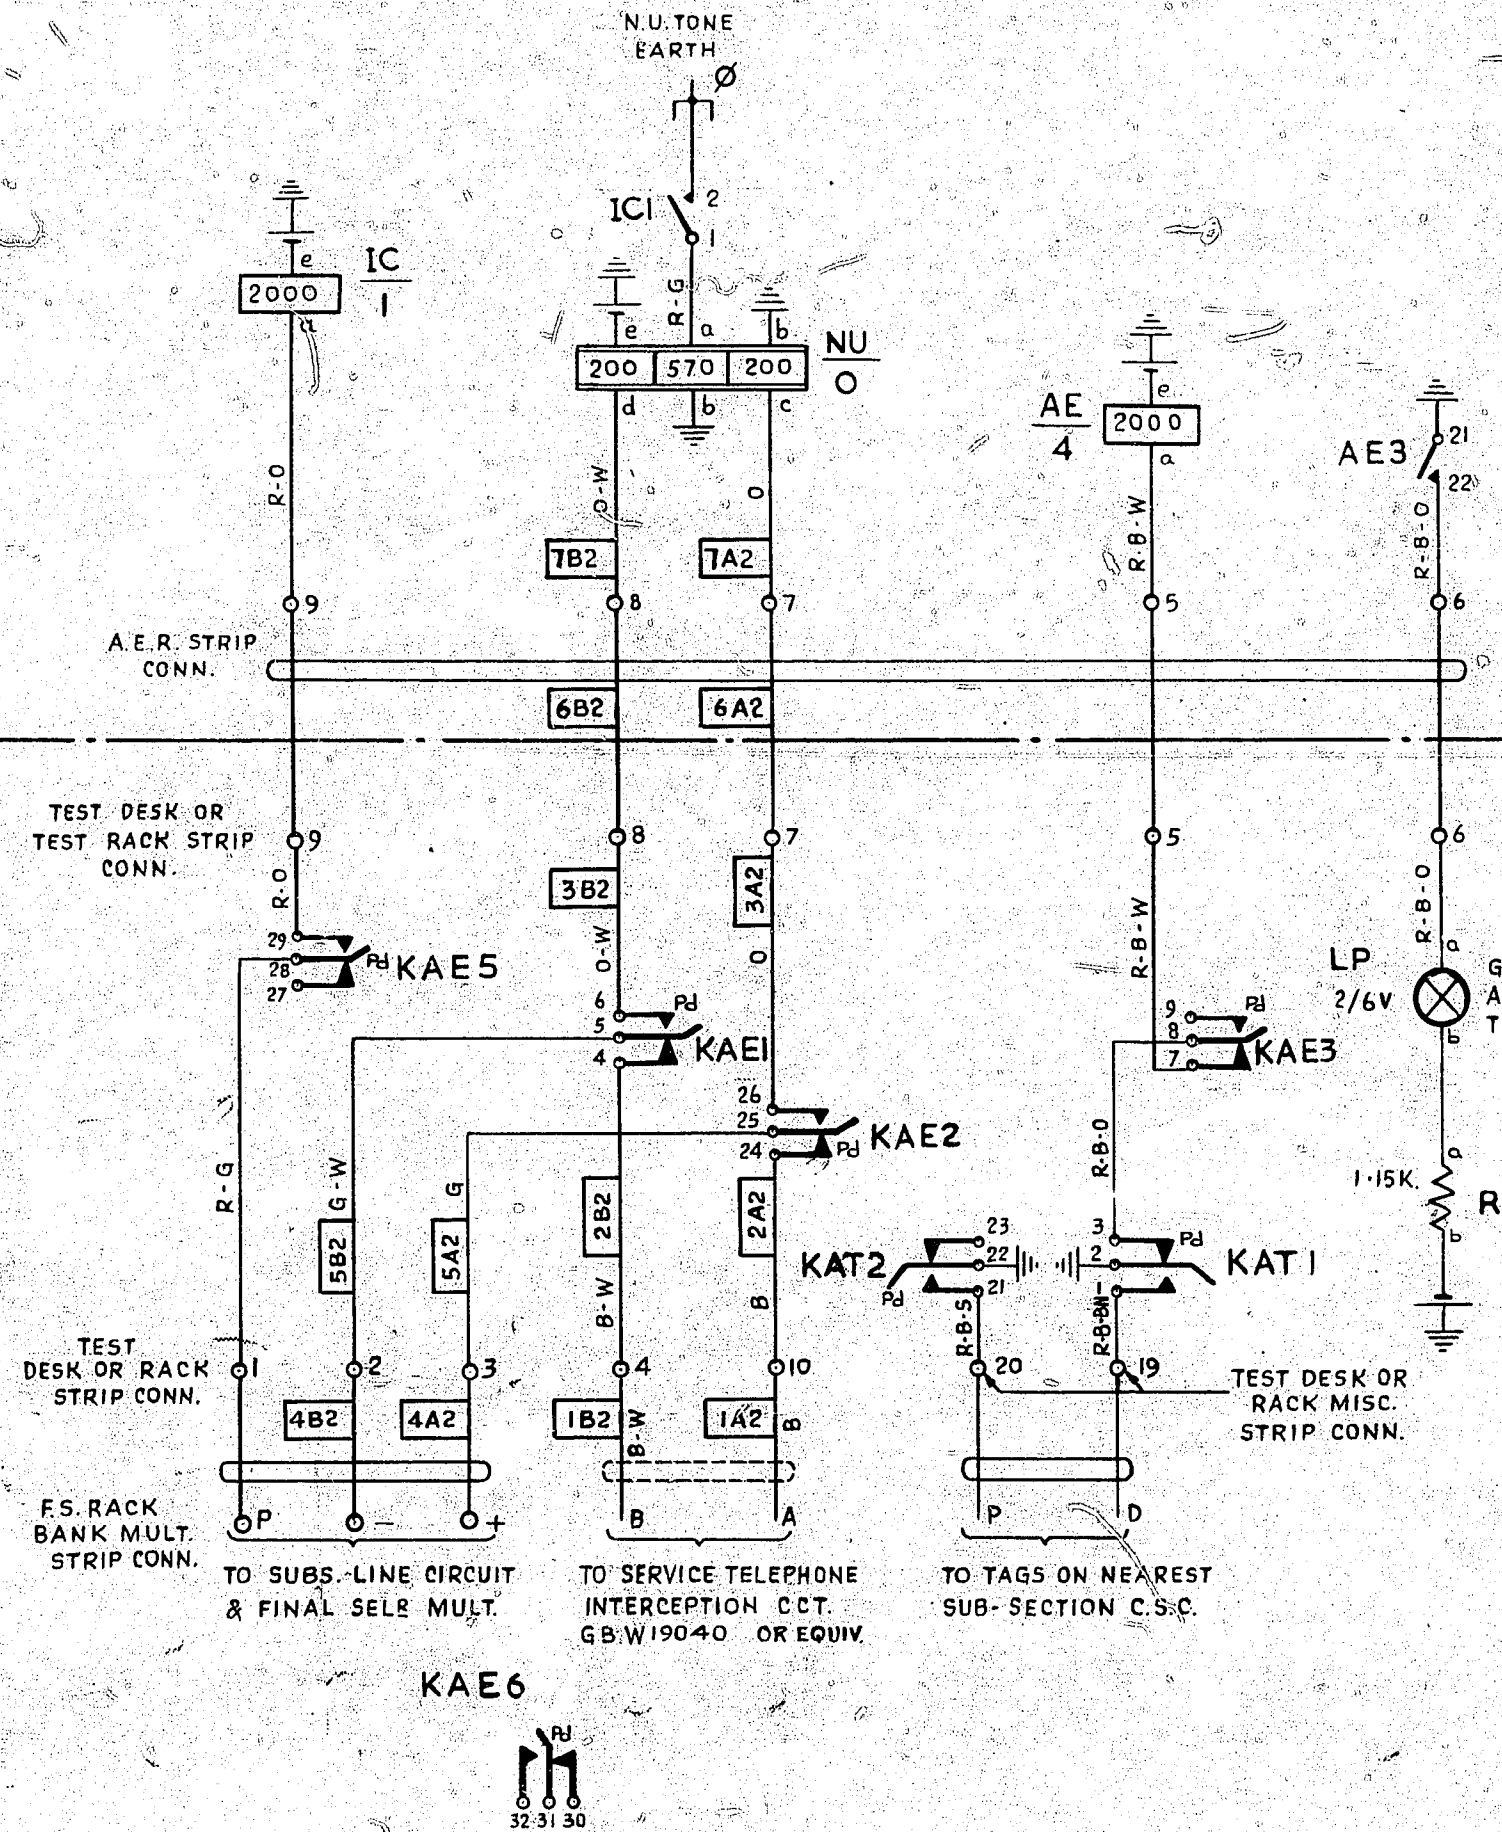


FIG. 2
ALARM EXTENSION KEY
AND LAMP.
MOUNTED ON TEST DESK OR RACK
PER EXCHANGE.

BATT. FUSE 20SWG 50V 22SWG V. R1B (TEST DESK)
BATT. FUSE 22SWG V. R1B (TEST RACK)
EARTH R. ETH BAR OR DESK ETH BAR KAT2-KAT22-KAE11
22SWG

SPEC. FAULTS (KSF)	ALM. EXT. TEST. (KAT)	ALM. EXT. (KAE)
2	2	6

- NOTES.**
1. FUSING:- 1.5A PER EXCHANGE. FIG. 1. FUSED ON AUXILIARY GROUP FUSE PANEL WHEN FITTED. 1.5A PER EXCHANGE. FIG. 2.
 2. EXCEPT WHERE OTHERWISE SPECIFIED ALL WIRING TO BE 25 SWG.
 3. ∅ FOR WIRING SEE GBW 11060 OR EQUIV.
 4. THIS TERMINAL ON BATT STRIP CONN. IS PROVIDED ONLY WHEN FUSE IS ON AUX. GROUP FUSE PANEL.
 5. AT SOME EARLY EXCHANGES BATTERY WIRING IS BK

ALARM EXTENSION. ORIGINATING EXCHANGES. 2000 TYPE (GEO-THERMAL AREAS)			
KAE WAS SHOWN OPERATED. NOTE 5 ADDED (21594)		2	14.5.70 RW
AMENDMENT PARTICULARS	ISSUE	DATE	APPD
			REF: GBW10570
			SIZE: S 50V E
DRAWN CHECKED WIRING CIRCUIT			GBW 19070