

0
5 Centimetres
10
15
20
25
30

FIG 1A

FIG 2
TOLL I.D.F.

FIG 3
MANUAL BOARD
(EXPLANATORY ONLY.)


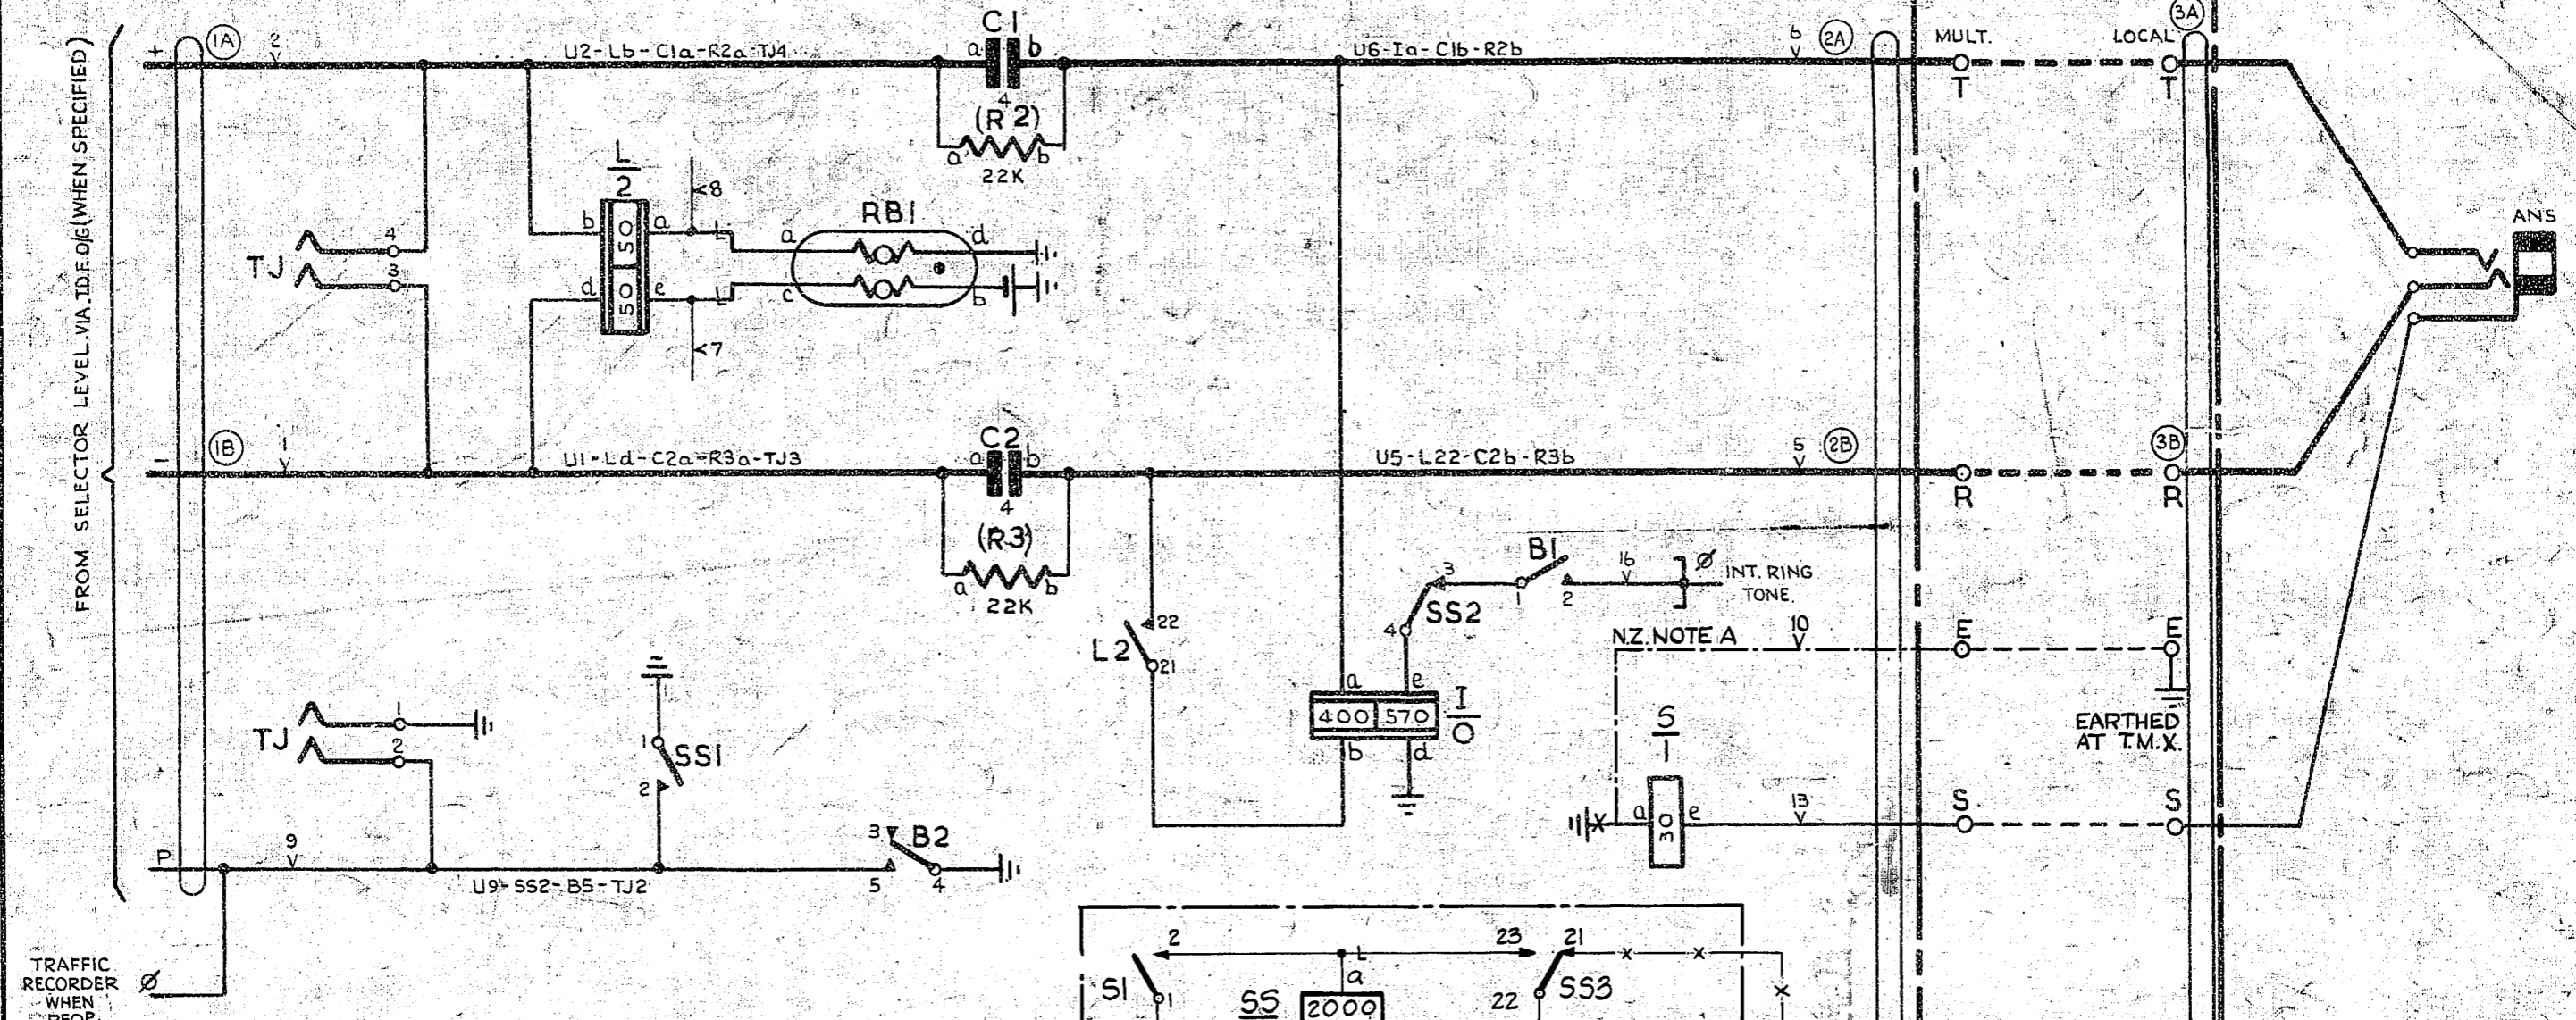




FIG 1B.

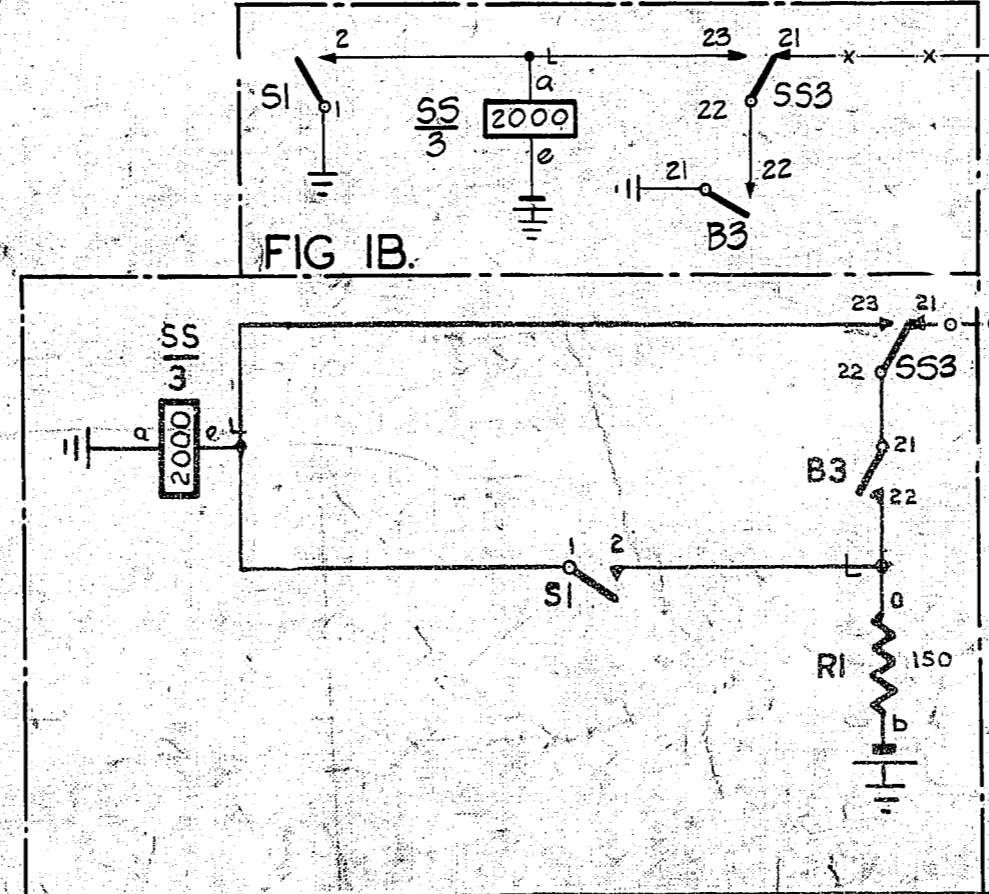

NOTES.

1. FUSING 1.5A. PER CIRCUIT.
2. Ø FOR WIRING SEE RACK COMMON SERVICES GBW 10640 OR EQUIV.
3. SHELF JACK U POINTS 9 & 11 MAKE CONTACT WHEN RELAY SET IS REMOVED
4. WHEN BATT. CONNECTED, CALLING LAMPS ARE FITTED SPECIFY FIGS. 1A & 1B & CONNECTION —x— WHEN EARTH CONNECTED LAMP RELAYS ARE FITTED SPECIFY FIGS. 1A & 1C & CONNECTION —o—

BATT. BK 22 SWG. FUSE (4B) U12
ETH. R. 22 SWG ETH. BAR (4A) U11

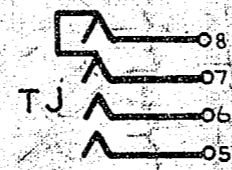

N.Z. NOTES
A. AT PM DISCONNECT EARTH FROM Sα AND USE CONNECTIONS SHOWN

FIG 1A & 1C { BATT. W. U12-R1b-RB1b-Be
ETH. R. U11-L2-Id-5a-RB1d-SS1-B4-TJ1

FIG 1A & 1B { BATT. W. U12-R1b-SS1e-Be
ETH. R. U11-L2-Id-5a-S1-RB1d-SS1-B2-B4-TJ1

AMENDMENT	PARTICULARS	ISSUE DATE	APP.
	N.Z. NOTE A ADDED.	24.7.61	
	FIG. 1 SECTIONALIZED & NOTE 4 ADDED	17.4.61	
		11.11.52	

N.Z.P.O. DRN CHK. WIRING CIRCUIT.

SELECTOR LEVEL RELAY SET LOCAL
MANUAL HOLD
W.E. TOLL BOARD

SIZE S 150V W

GBW 12240

SLOW RELEASE
 SLOW OPERATE