FIG 1 FUSE ALARM

FIG 1B 1 PER RACK

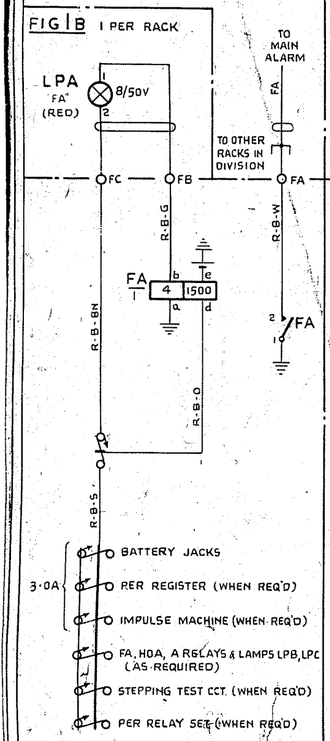

ALL FUSES NOT OTHERWISE SPECIFIED TO BE 1·5A

FIG 1A
1 PER RACK

BATT EARTH — SEE FIG 3A

FIG 2 BATTERY JACKS

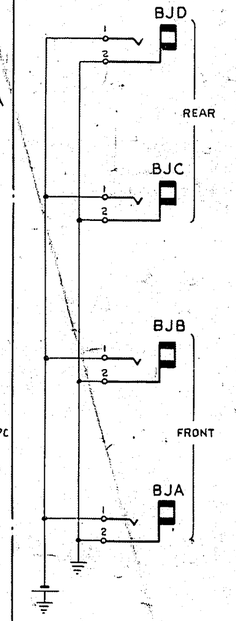

FIG 2A
1 PER RACK

BATT. BK FUSE (1B) — BJC1-BJD1, BJA1-BJB1

EARTH R ETH BAR (1A) — BJC2-BJD2, BJA2-BJB2

FIG 3 HOLD-OVER ALARM

FIG 3B 1 PER RACK

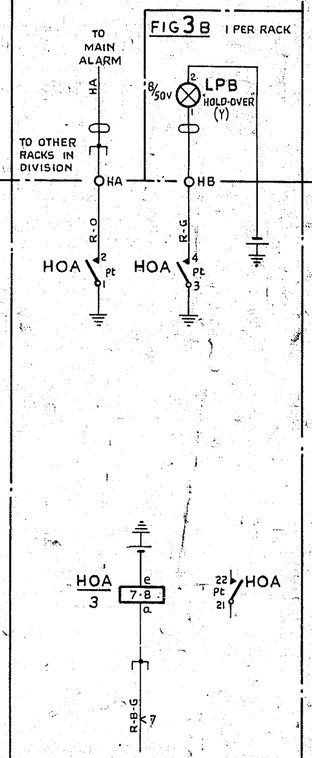

FIG 3A
1 PER REGISTER RACK

BATT. BK FUSE — (LPB2-LPC2)

FAe-(HOAe-Ae-YA2)

EARTH R ETH BAR — FAo-FA1-(HOA1-HOA3-A2I-AI-A3)

(KR2-KR22-KCR5-KCR25)

FIG 4 IMPULSE MACHINE CONTROL AND ALARM CIRCUIT

FIG 4B 1 PER RACK

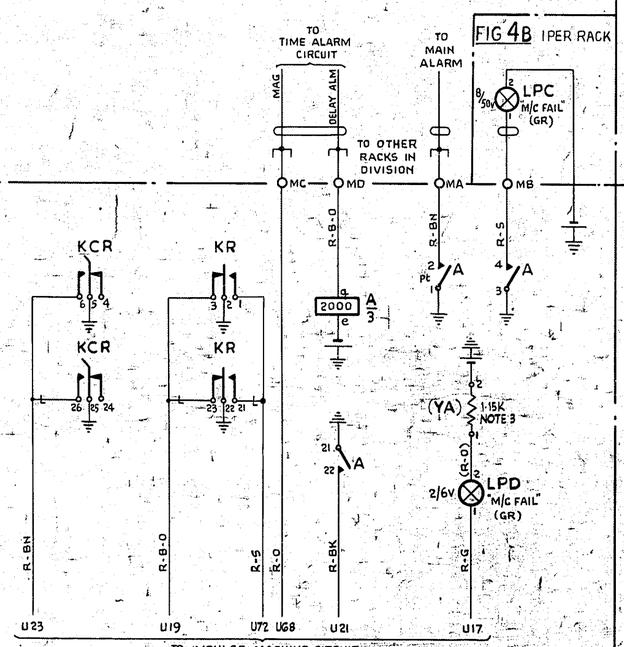

FIG 4A
1 PER REGISTER RACK

CONT. RUN (KCR) + RESET (KR)

FIG 5 BUSY TONE EARTH DISTRIBUTION

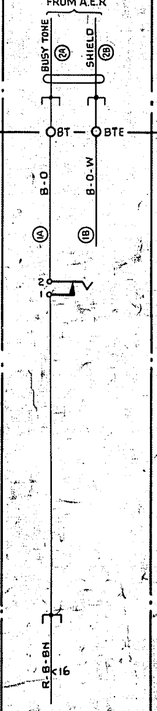

FIG 5A
1 PER REGISTER RACK

FIG 6 TRAFFIC RECORDER

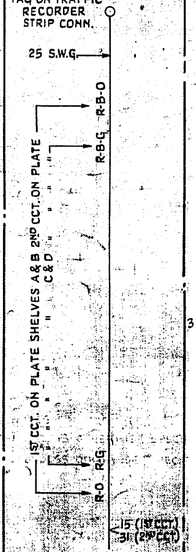

FIG 6A
2 PER RELAY SET

NOTES:
1. UNLESS OTHERWISE SPECIFIED ALL WIRING TO BE 22 S.W.G.
2. UNLESS OTHERWISE SPECIFIED, TAGS ARE ON RACK MISC. STRIP CONN.
3. ON SOME EARLY EQUIPMENT YA 1500Ω TYPE No. 12.
4. WHERE IMPULSE M/C IS TO GBW 11320, USE FIGS. 8, 9 & 10.

FIG 7 FUSE ALARM
F.U. AT EXCHANGES EQUIPPED WITH A.E.R.

FIG 7B 1 PER RACK

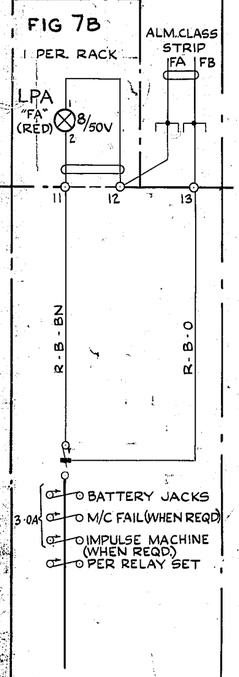

ALL FUSES NOT OTHERWISE SPECIFIED TO BE 1·5A

FIG 7A
1 PER RACK

FIG 8. PROMPT ALARM
NOTE 4.

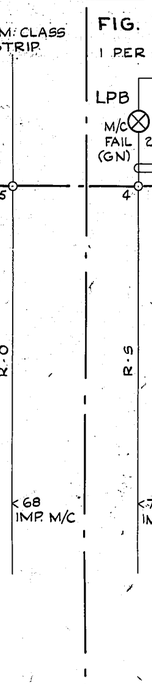

FIG 8A
1 PER RACK

FIG 9. RACK LAMP MACHINE FAIL ALARM
NOTE 4

FIG 9B. 1 PER RACK.

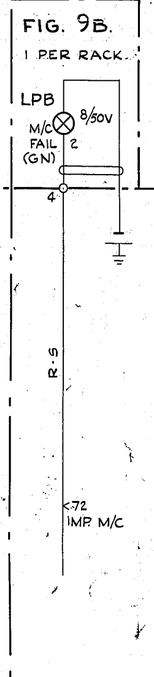

FIG 9A
1 PER REG. RACK
BATT. BK. FUSE (1B) LPB1

FIG 10. EARTH PULSE DISTRIBUTION
NOTE 4

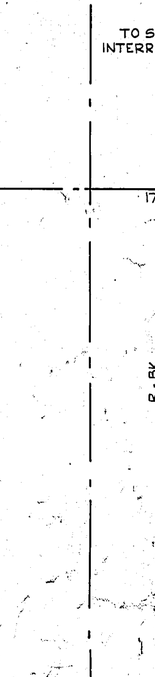

FIG 10A
1 PER RACK

SLOW RELEASE | SLOW OPERATE

COMMON SERVICES RACK WIRING
INTERWORKING RELAY SET RACK & REGISTER RACK
(7A ROTARY TO STEP BY STEP)

AMENDMENT PARTICULARS	ISSUE	DATE	APP'D	REF
(86825)	A	20·4·70	R.W.	

ST & C DRGS. L 96142 & L 96116 | 50 V | E

SIZE L

DRAWN F.H. 3·7·49 | CHECKED | WIRING F.H. | ENGINRS.

N.Z.P.O. F.U. WELLESLEY ST. I

GBW 11450 MOD.A

0 5 Centimetres 10 15 20 25 30 35 40 45 50 55